UniFlame

Contact (866)758-3900 for assistance.
Do not return to place of purchase.

Assembly instructions

Model # S-1062

Part	Description	Qty
A	Front leg	2
B	Back leg	1
C	Door Handle	1

1	Screws	8
2	Nut	6

Step 1

Attach front legs (A) to screen using 4 screws and nuts.

Step 2

Attach back legs to screen using 2 screws

Step 3

Attach door stopper to screen using 2 screws.

Caution: Keep this product clean by using a damp cloth. DO NOT use abrasive cleaners as it will cause parts to tarnish

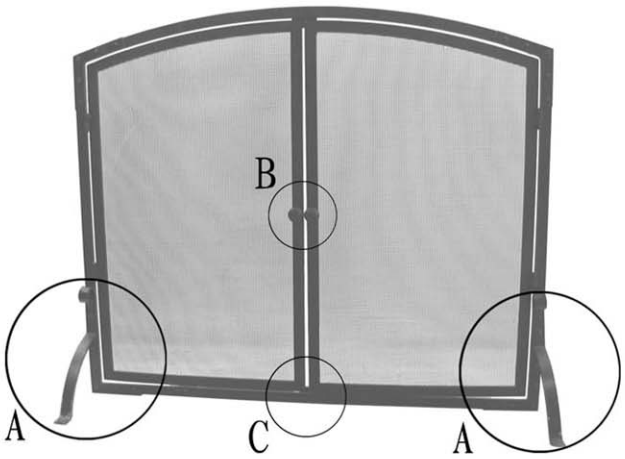

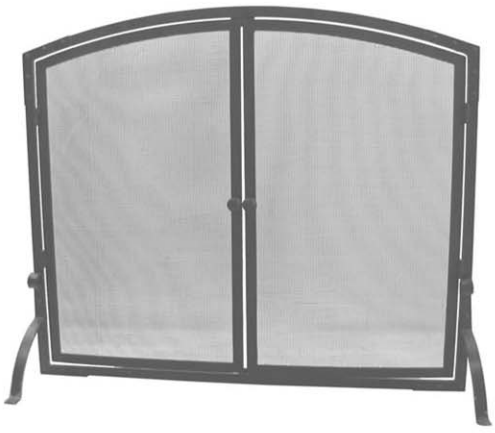

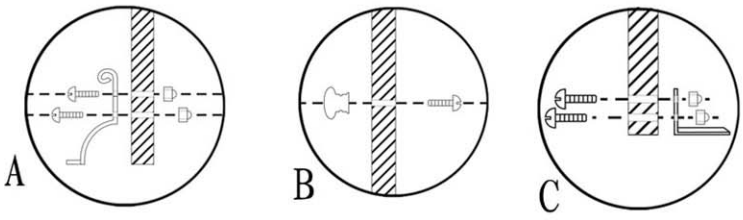

Manufactured in China for:
Blue Rhino Global Sourcing Inc
Winston-Salem, NC USA
1.866.758.3900. www.uniflame.com
2008 Blue Rhino Global Sourcing Inc. All rights reserved.
UniFlame is a registered trademark of Blue Rhino Global Sourcing Inc. All rights reserved.